



Instructions and Installation




**LAMONA**

Exclusive to Howdens Joinery Co.


**Register** ✓  
**my appliance**







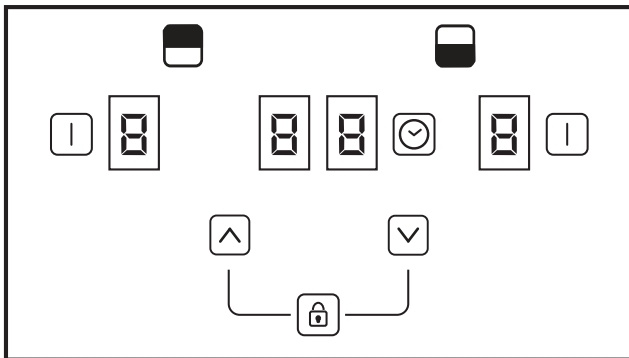

[www.howdens.com/appliance-registration](http://www.howdens.com/appliance-registration)


## Using the hob

-  Do not use the ceramic hob if the glass surface is cracked, as electrical parts are directly beneath. Switch off the appliance at the supply to prevent electric shock and contact your supplier.
-  The appliance is not intended to be operated by means of an external timer or separate control system.
-  The hob surface remains hot after use. **DO NOT TOUCH.**

## Controls Layout





	On/Off (Left key for front zone, right key for the rear zone)
	Keylock symbol
	Temperature increasing / decreasing
	Enable / disable timer
	Cooking zone front
	Cooking zone rear
	Cooking zone displays (temperature settings 0-9)
	Timer display (there are 4 LEDs for 4 cooking zones)


During the initial start up of the hob (or power failures)  will be displayed for several seconds and an audible alarm will sound.

This device is controlled with touch control panel. Each operation you make on your touch control panel will be confirmed by an audible signal.

Always keep the control panels clean and dry. Humidity and dirt can cause problems in the function.


## Turning on the hob


1. When the hob is first powered on the  symbol will appear on all zone displays, and an audible alarm will sound.
2. After a few seconds the  symbol will disappear and “0” appears on the front display, “1” appears on the rear zone display.

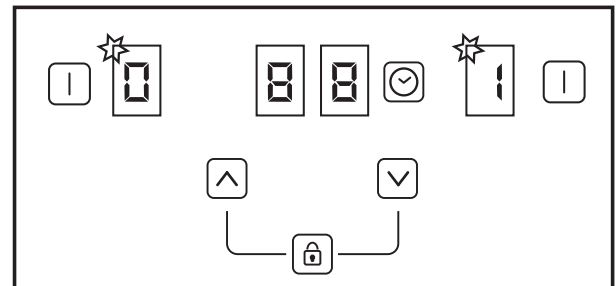


3. After a few seconds all symbols will disappear on the zone display and an audible alarm will sound and return to standby mode.

## Using the hob


1. On the control panel touch the  key on the cooking zone you want to switch on.

 appears on the cooking display. Cooking zone is ready for use.

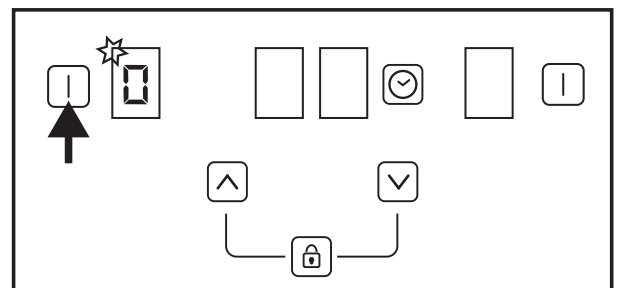

The hob will automatically return to standby mode if no operation is performed within 10 seconds.

2. Adjust the desired temperature level by touching the  $\uparrow$   $\downarrow$  keys. It can be set to a level between 1 and 9 or between 9 and 1.

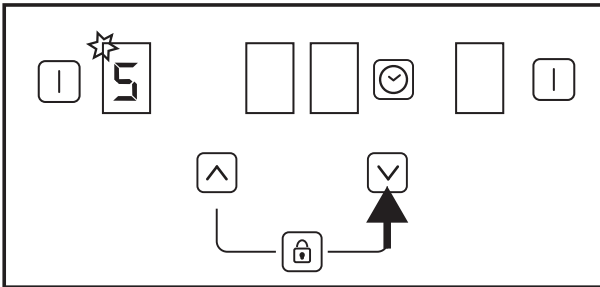

The relevant cooking zone will start to operate at the set temperature level.

#### Switching off the cooking zone:

An active cooking zone can be switched off in 3 different ways:

1. By touching the  $\square$  key of the cooking zone you want to switch off.

2. By dropping the temperature to "0" level; You can switch off the cooking zone.

#### 3. By using the switching off function on the timer for the desired cooking zone:

When the time is over, the timer will switch off the cooking zone linked to it. "0" / "00" values and "t" symbol will appear on all the displays consecutively. When the time is over, and audible alarm will sound. Touch any key on the control panel to silence the alarm.



If "H" is on after cooking zone has been switched off, it means that the cooking zone is still hot. Do not touch the cooking zones.

#### Residual heat indicator

If "H" symbol is flashing on the cooking zone display it means that the hob can still be used to keep a small amount of food warm.



When the electricity is cut off, residual heat indicator will not light up and does not warn the user against hot cooking zones.

## Booster


#### High power setting (Booster)

You can use booster function for rapid heating. When booster is activated, the cooking will


operate at maximum power for a certain period of time. Booster time depends on the selected temperature level. However, this function is not recommended for cooking a long time. All cooking zones are equipped with Booster function.

#### Selecting the high power setting (Booster)

1. Switch on cooking zone you desire by touching the  $\square$  key.

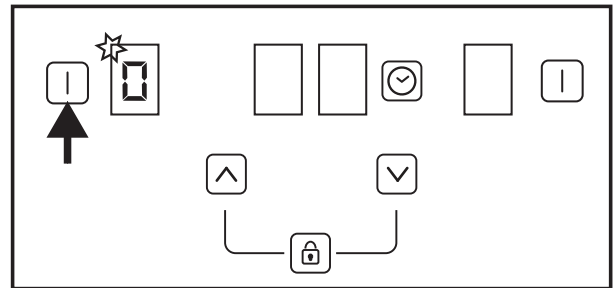

2. Touch the  $\downarrow$  key to set the cooking zone temperature value to "P".

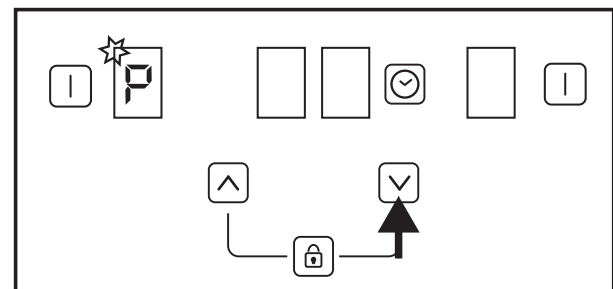

Selected cooking zone will operate with maximum power "P" symbol will appear on the cooking zone display. Cooking zone will switch itself off when the booster time is up.



#### Switching off the high power setting (Booster) to early:


1. Touch the  $\downarrow$  key until the temperature level decreases to "0" to disable the booster function earlier.

## Key Lock



You can activate the keylock to avoid changing the functions by mistake when the hob is operating.

### Activating the keylock

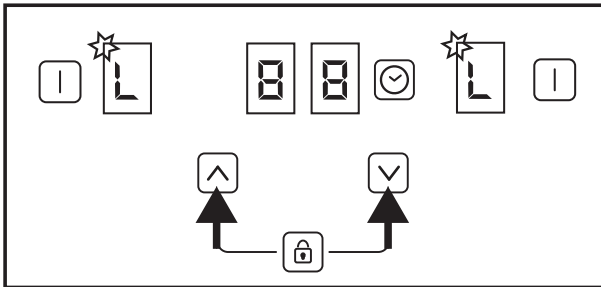

1. Touch the  and  keys simultaneously for at least 2 seconds while any of the cooking zones are active.



Only one signal sound will be heard. Key lock function is activated and "L" appears on all cooking zone displays.

 You can activate the key lock in the operation mode only. Only the  key will be functional when the key lock is active. When you touch any button "L" will blink on all cooking zones to indicate that the key lock is active. If you switch the hob off when the keys are locked, you must deactivate the key lock in order to be able to switch on the hob again.

### Deactivating the key lock

1. Touch  and  keys simultaneously for at least 2 seconds.


Only one signal sound will be heard. Keylock function is deactivated and "L" disappears on all cooking zones displays.


### Timer function



This function makes it easier for you to cook. You will not have to watch the hob for the whole cooking period. The cooking zone will be switched off automatically at the end of the time period you have set. The timer value can be selected between 1 and 99 minutes. It is possible for the user to time a cooking zone at any temperature level.


## Timer


### Activating the timer

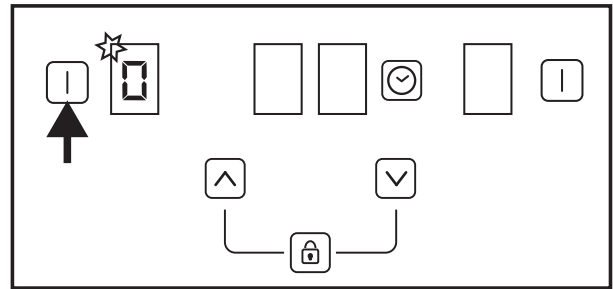
1. Switch on the cooking zone you desire by touching the  key.



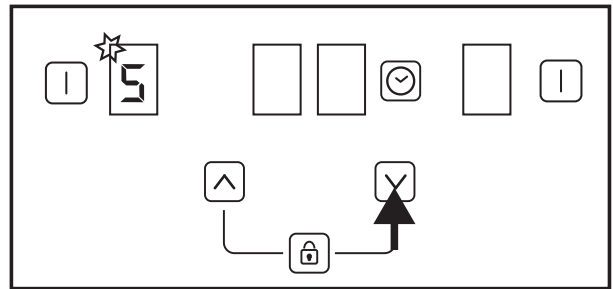


2. Adjust the desired temperature level by touching the  and  keys.

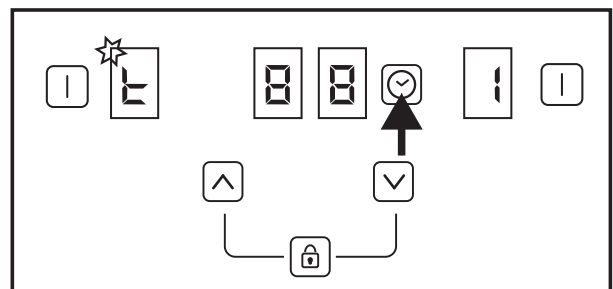

3. Activate the timer by touching the  key "t" symbols will blink on related cooking zones.



4. Adjust the desired cooking time by touching   keys.

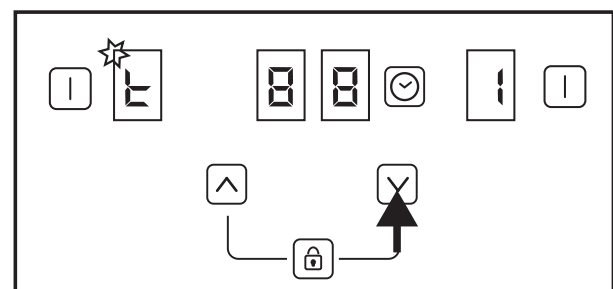

5. After approximately 10 seconds, the setting will be activated.

When the time set on the timer has run out, the timed cooking zone is switched off. A timer alarm beep sounds for one minute. But "t" and "00" symbols starts blinking constantly until touch any key.

6. In order to set the timer of the other cooking zone,

repeat the process explained above. It is possible to set the timer to both of the cooking zones simultaneously. If it is set the timer to both cooking zones, the lower timer value appears on the timer display.



Timer cannot be set without selecting the cooking zone.



If the timer is not selected before the 10 seconds, the timer is switched off. If the selected time is “00” after 10 seconds the timer is switched off.

### Changing the timer

When the timer is in countdown the user can change the time at any time by touching the timer key, the countdown stops and the timer changes to the time selection status waiting a time selection.

### Deactivating the timers early

If you deactivate the timer earlier, the hob will keep on operating at the set temperature until it is switched off. You can deactivate the timer earlier in two different ways:

#### Deactivating the timer for related zone by dropping its value to “00”.

1. Touch the timer  key until the “00” appears on the display of the cooking zone whose timer is active.

The timer will be cancelled and the temperature level reduced to “0” of the related zone.

### Operation time limits

The hob control is equipped with an operation time limit. If one or more cooking zones are left on, the cooking zone will automatically be deactivated after a certain period of time (see table below). If there is a timer assigned to the cooking zone, the timer display will also turn off later.

Operation time limit depends on the selected temperature level. Maximum operation time is applied at this temperature level.

The cooking zone may be reactivated by the user after it is switched off automatically as described above.

Temperature Level	Operation Time Limit Hour
0	0
1	10
2	5
3	5
4	4
5	3
6	2
7	2
8	2
9	1
Rapid Heating (P)	1

### Overheating protection

Your hob is equipped with sensors which provide protection against overheating. Following may be observed in the case of overheating:

- Operating cooking zone may get switched off.
- Selected level may drop. However, this condition cannot be seen on the indicator.

### Error Messages

Cause Of The Error	Display
Touch control software error	F0
Touch control zone is too hot and has turned off all heaters	Fc
Touch control temperature sensor can be damaged	Ft/FE
Excessive sensitivity on any key	Fb
Security keyboard error	FU/Fj